


Battery

Removal


**NOTE:** Removal steps in this procedure may contain installation details.

**NOTE:** Left hand drive (LHD) shown, right hand drive (RHD) similar.

1. Refer to: [Battery and Battery Charging Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. Disconnect the battery.  
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).
3.
  - Disconnect the vent tube.
  - Loosen and remove the battery hold-down bolt and clamp.  
Torque: 71 lb.in (8 Nm)

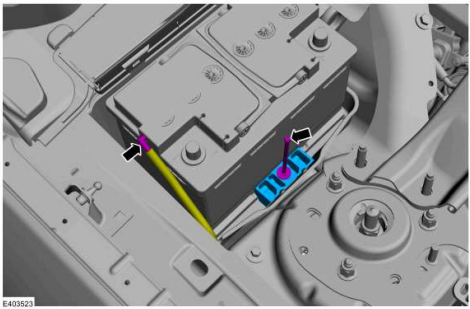

4. Remove the battery.

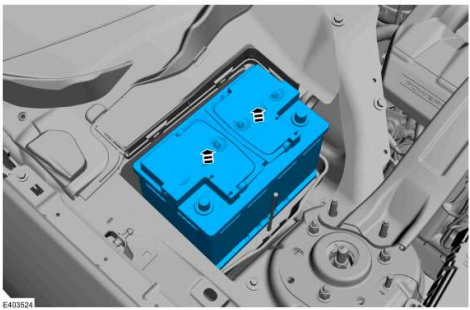

Installation

1. To install, reverse the removal procedure.
2. If installing a new battery, use the scan tool to carry out the Battery Monitoring System (BMS) reset after the battery is connected.