

Floor Console

Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Left hand drive (LHD) shown, right hand drive (RHD) similar.


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Release the clips and remove the lower passenger side floor console trim panel.
Use the General Equipment: Interior Trim Remover

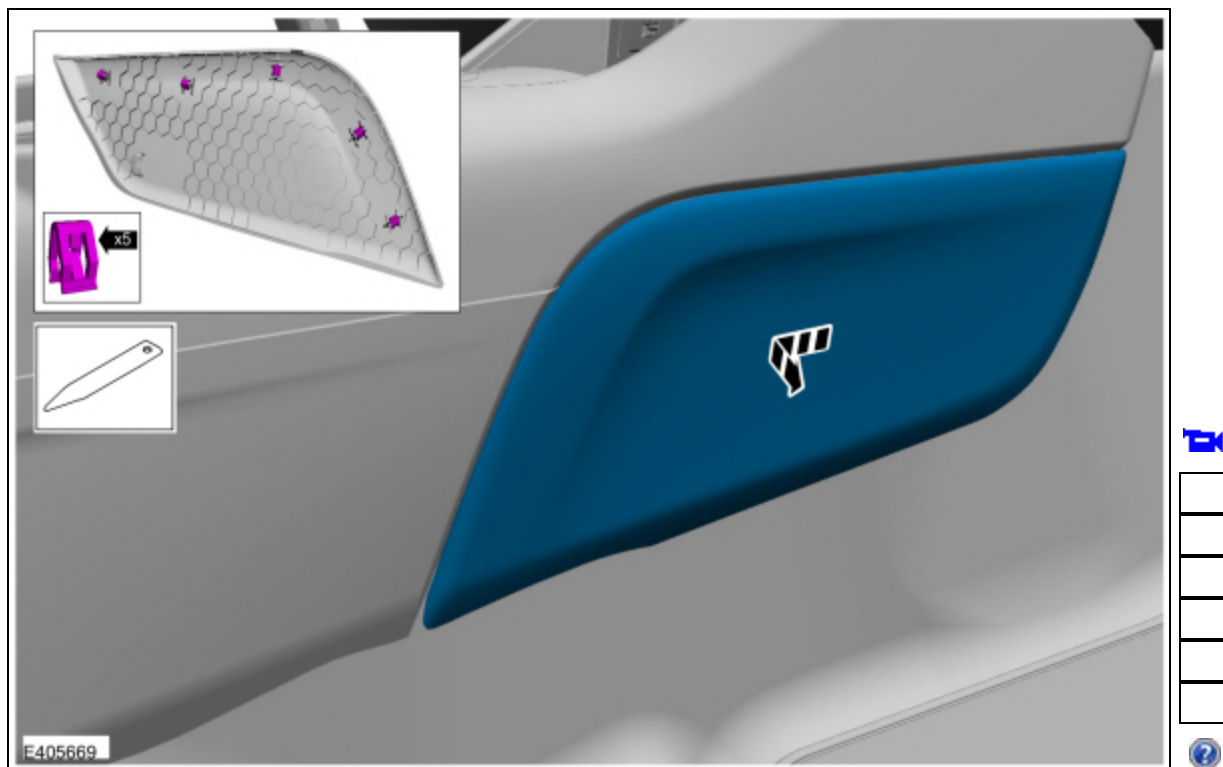

2. Release the clips and remove the lower driver side floor console trim panel.
Use the General Equipment: Interior Trim Remover

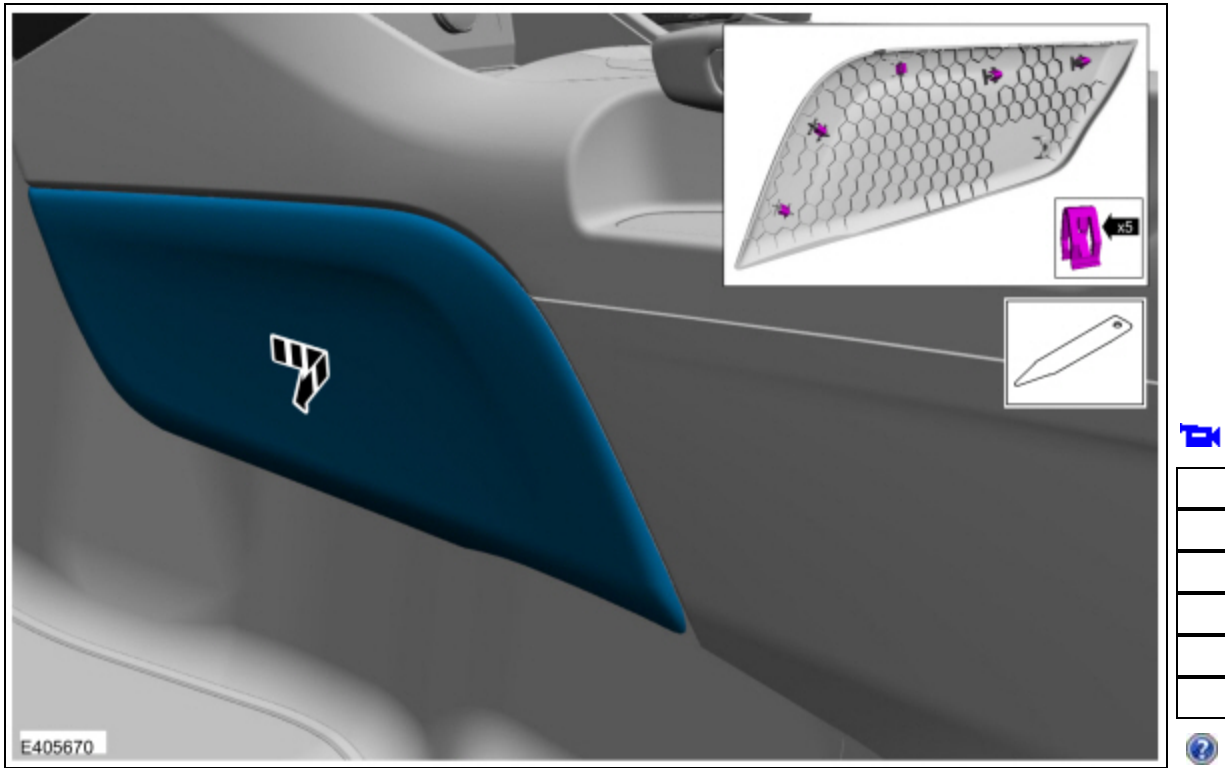


Vehicles without Wireless Accessory Charging

3. Remove the mat.




4. Remove the bolts and the media bin.
- Disconnect the electrical connectors.
- Torque: 22 lb.in (2.5 Nm)*

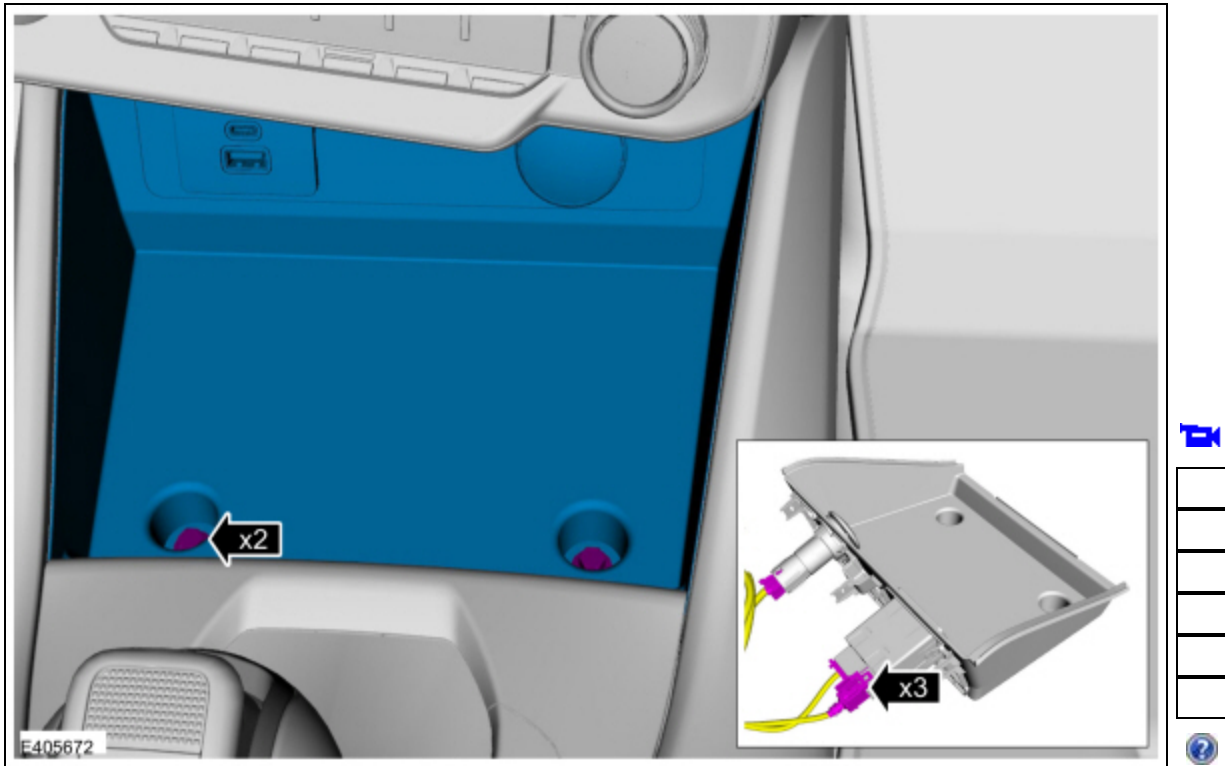


Vehicles with Wireless Accessory Charging

5. Remove the mat.

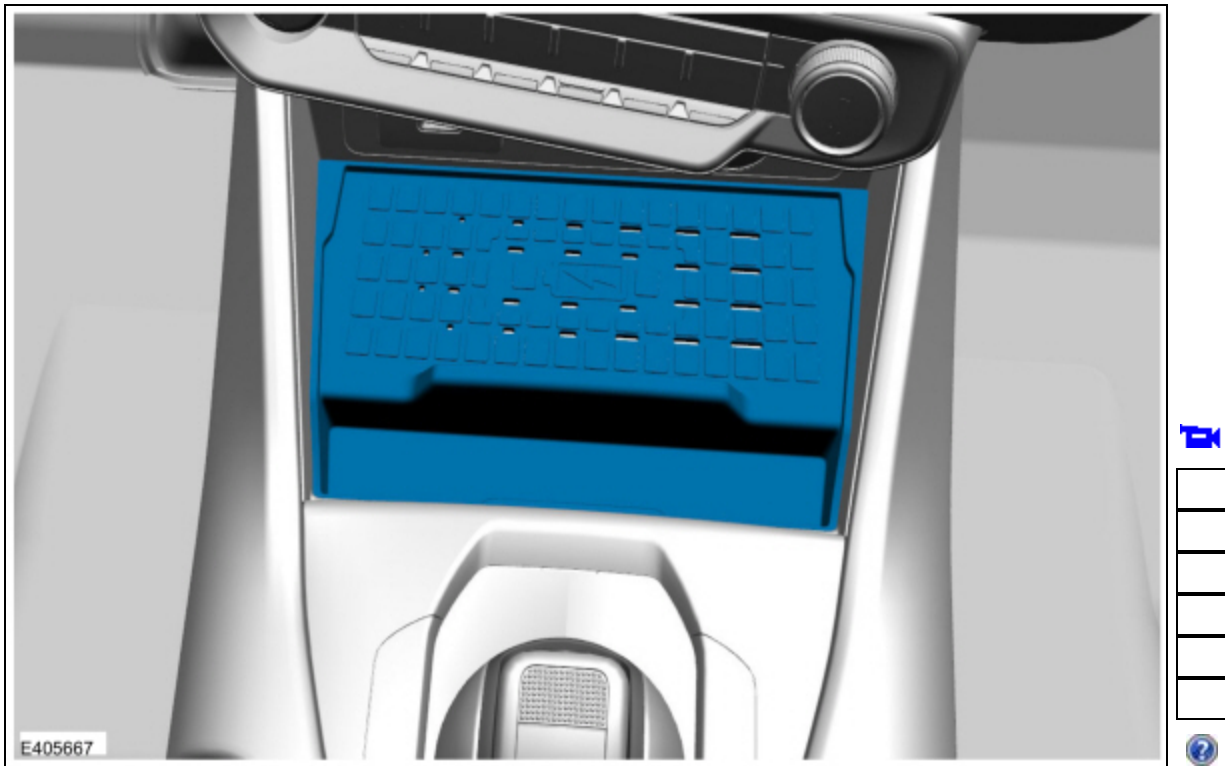

6. Remove the bolts and the media bin.
• Disconnect the electrical connectors.
Torque: 22 lb.in (2.5 Nm)

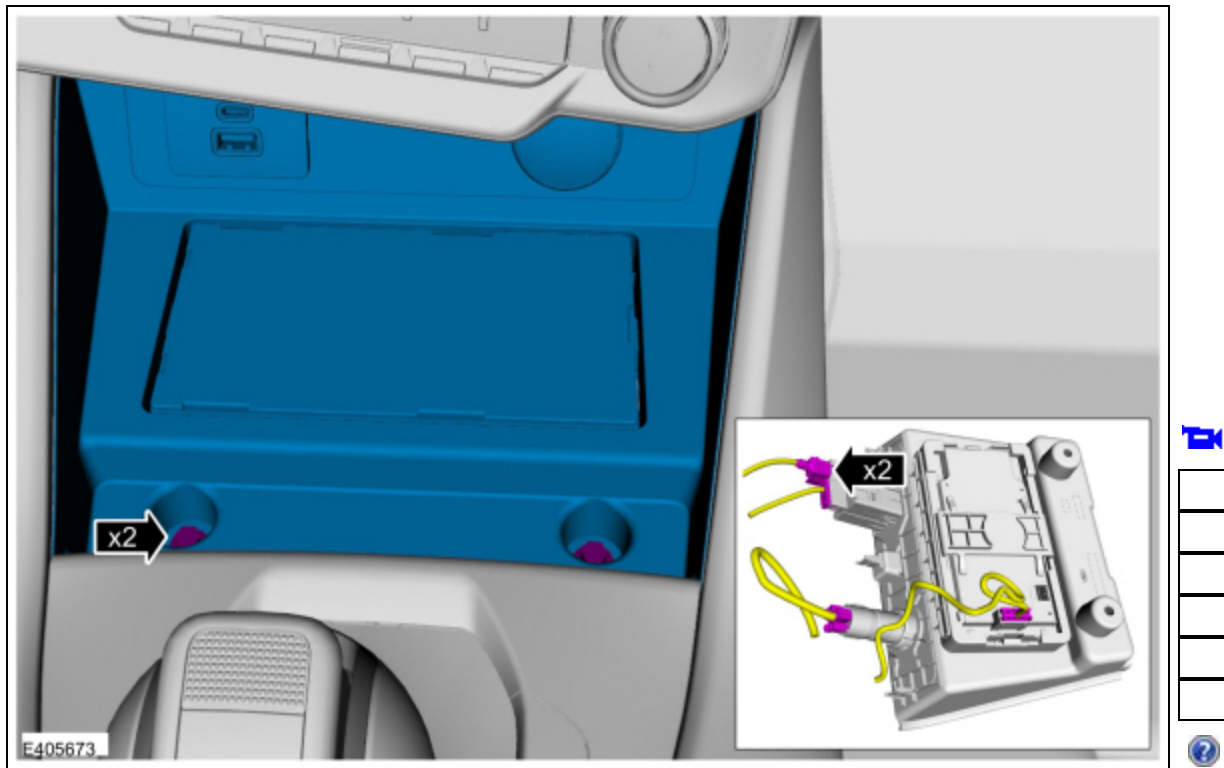

Vehicles with 6-speed manual transmission

7. Remove the gearshift lever boot.

 

Refer to: [Gearshift Lever Boot](#) (308-06A Manual Transmission External Controls - 6-Speed Manual Transmission – 3160, Removal and Installation).

Vehicles with automatic transmission

8. Remove the selector lever knob.

Refer to: [Selector Lever Knob](#) (307-05 Automatic Transmission External Controls - 10-Speed Automatic Transmission – 10R80, Removal and Installation).

9. Release the clips and remove the selector lever boot.
Use the General Equipment: Interior Trim Remover

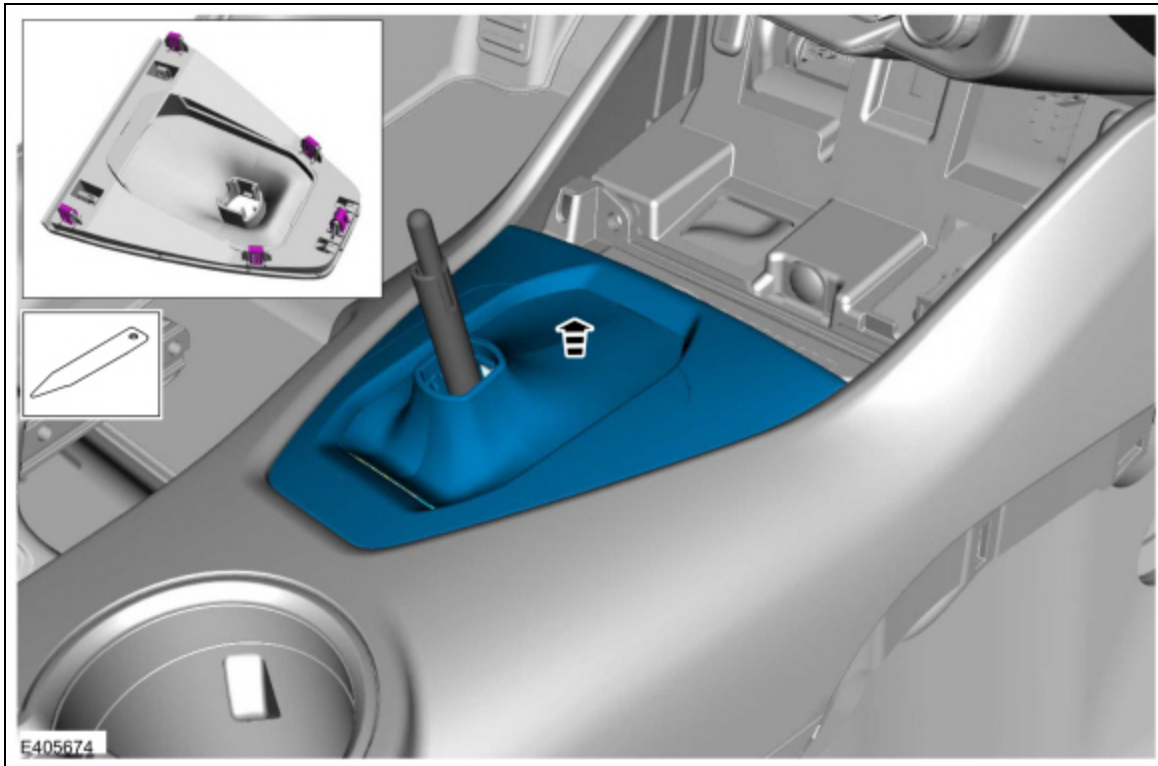



All vehicles

10. **NOTE:** *If equipped.*


Remove the screws and the park brake handle.



 

11. Open the arm rest.

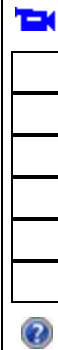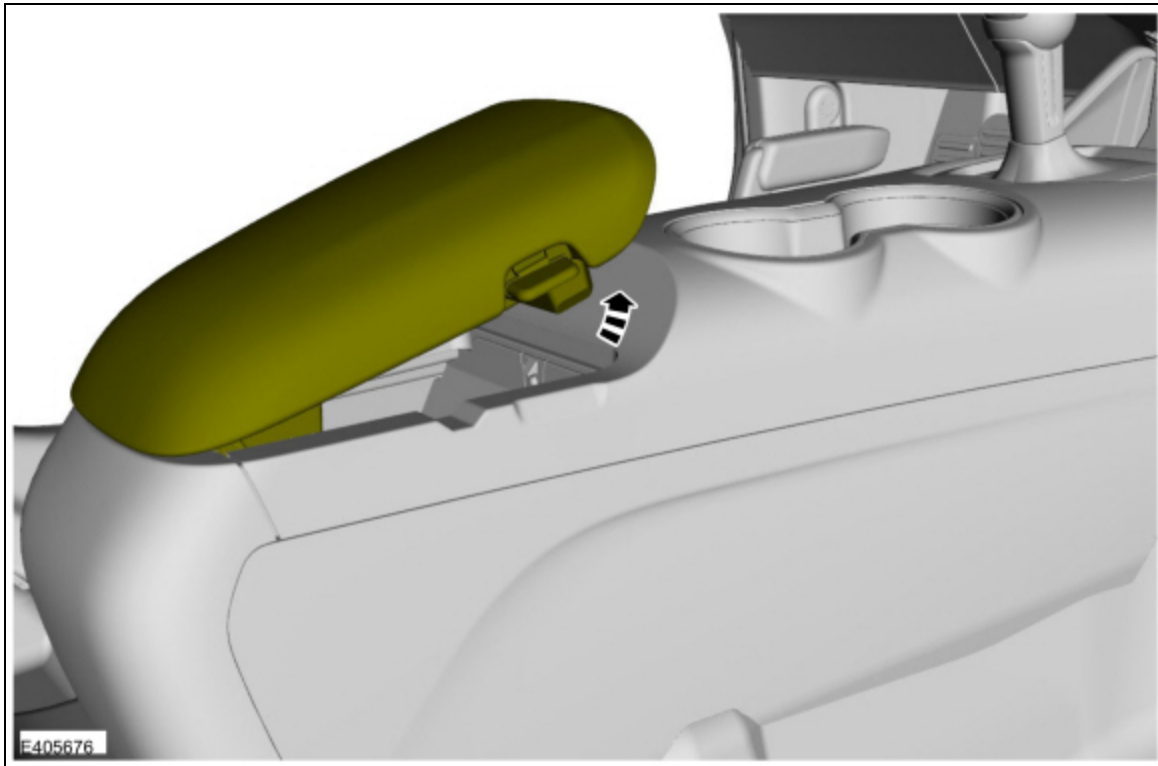



12. Remove the bolts, release the clips and remove the floor console upper trim panel.
- Disconnect the electrical connector.
Torque: 22 lb.in (2.5 Nm)

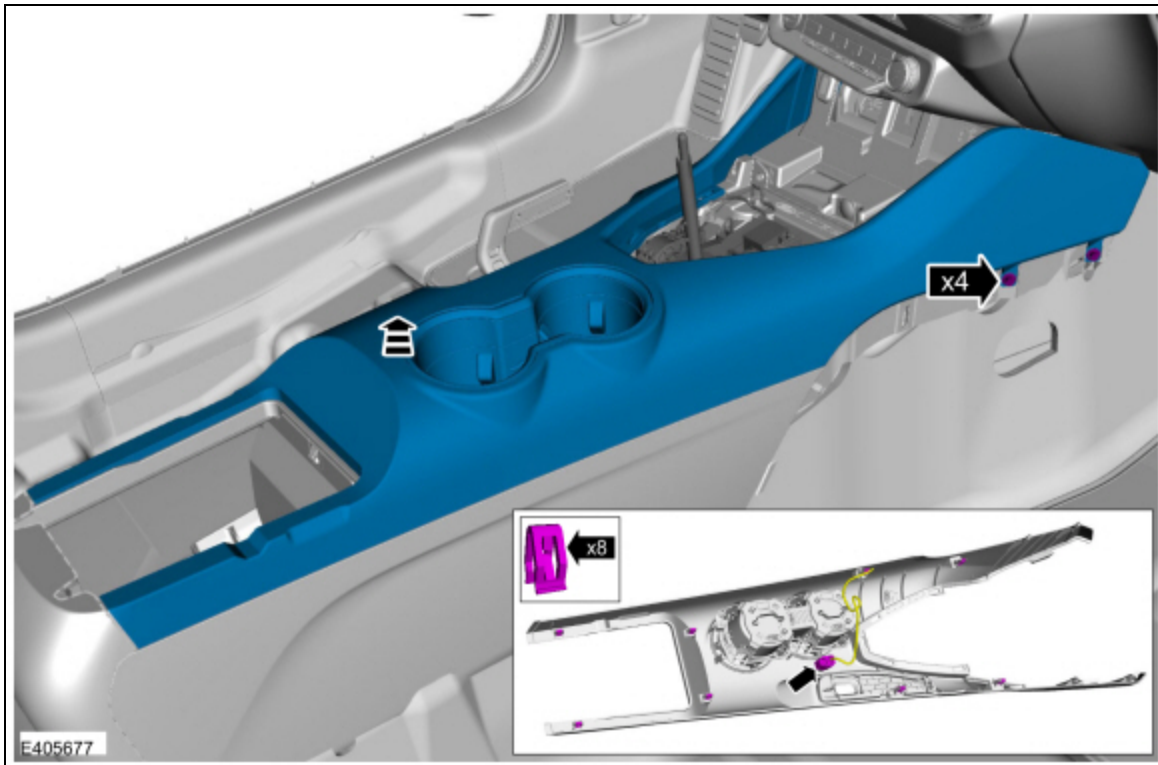

 
13. **NOTE:** If equipped with EPB.
- Disconnect the EPB electrical connector.

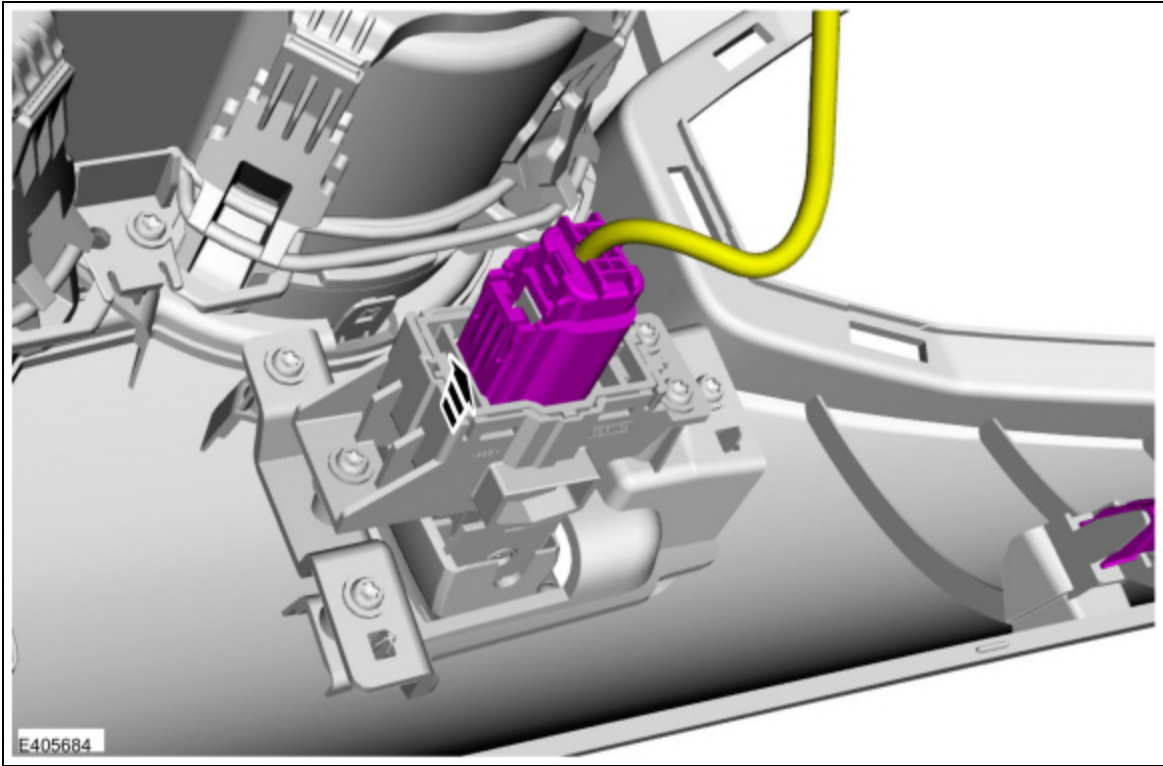

 
14. Disconnect the electrical connectors.

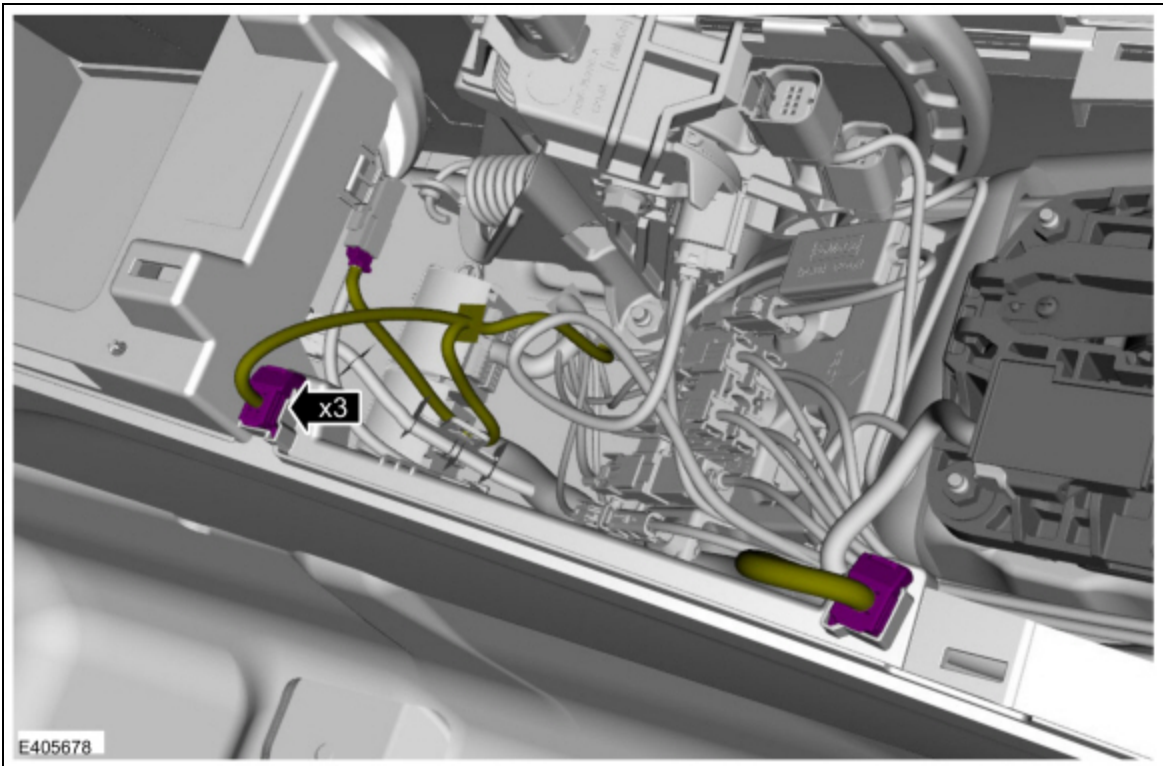


15. Remove the rubber mat in the arm rest storage compartment.

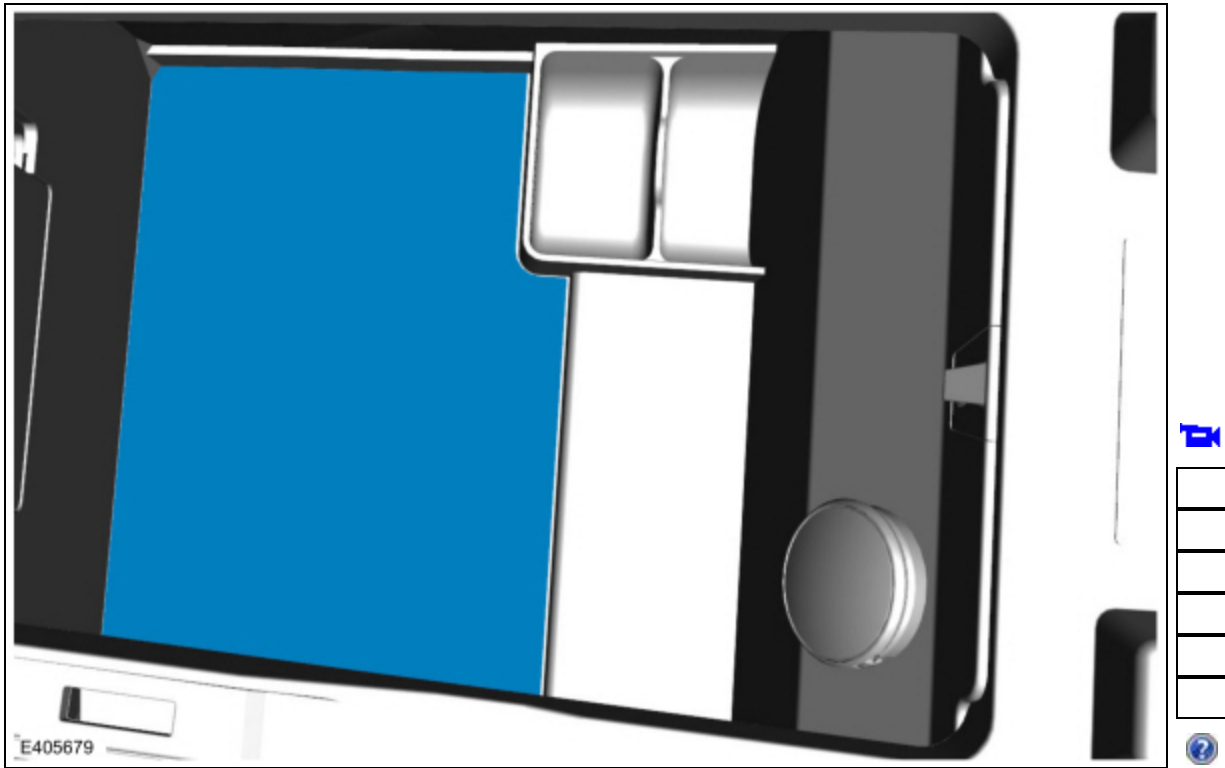

- 16. Remove the nuts.
Torque: 19 lb.in (2.2 Nm)

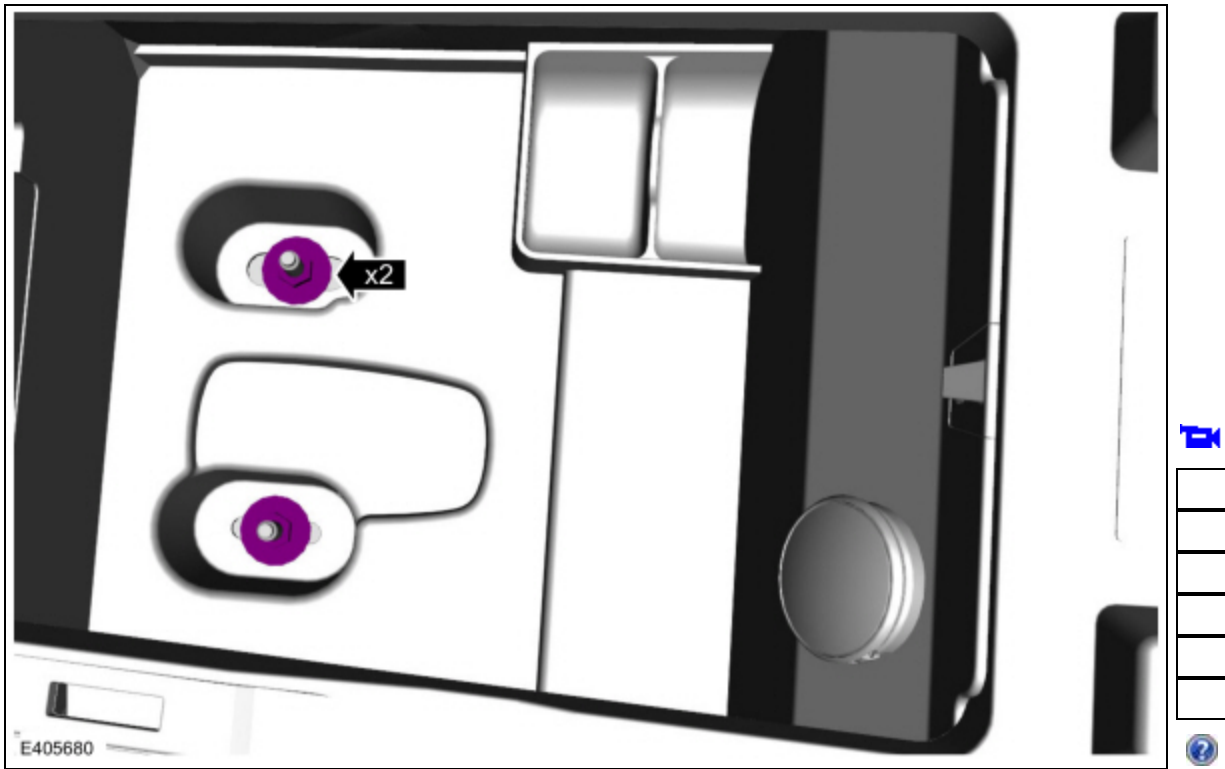

- 17. Remove the bolts and the floor console.
Torque: 22 lb.in (2.5 Nm)

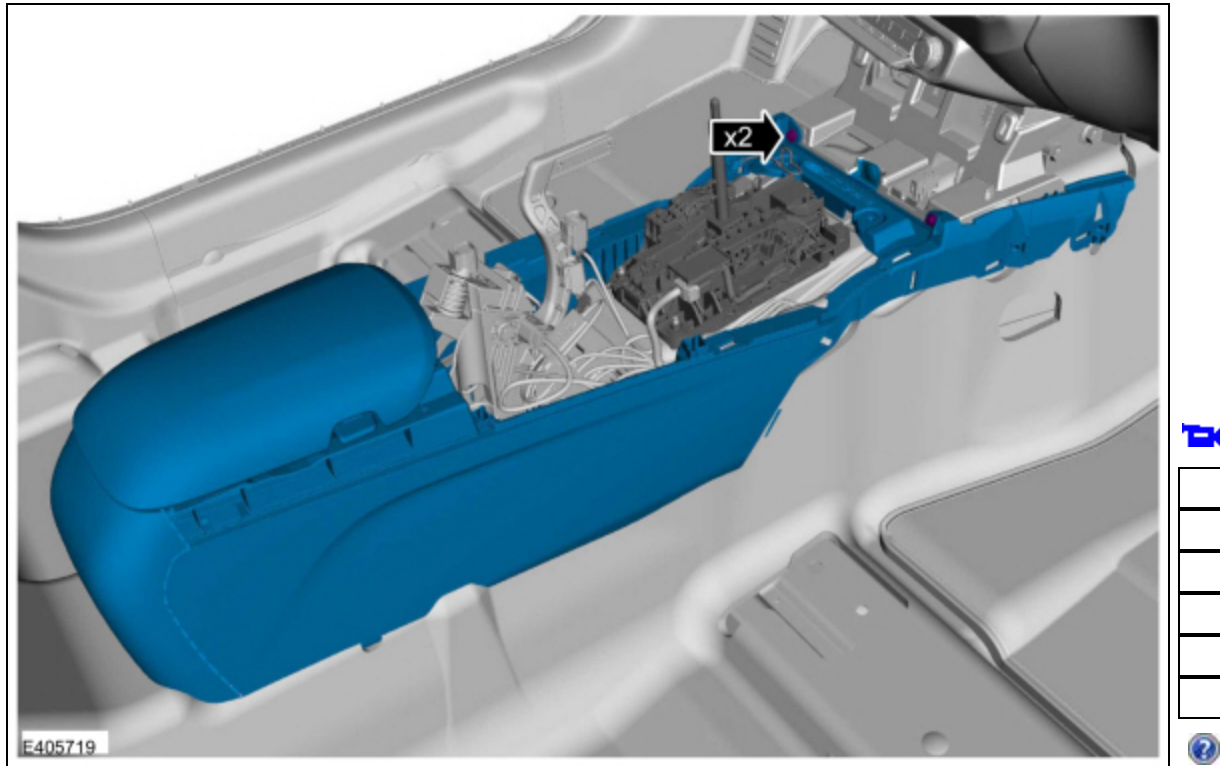

Installation

1. To install, reverse the removal procedure.

2. **NOTE:** *If equipped with EPB .*

NOTE: *Anytime the parking brake switch electrical connector has been disconnected, the EPB system is deactivated and a DTC is stored in the EPB module. Perform the following step to restore the EPB system and clear the EPB module DTC .*

Apply and release the parking brake twice within 5 seconds, pausing with the switch in the NEUTRAL position for approximately one-half second between each apply and release.

© Copyright 2025, Ford Motor Company.