

Initiating Line Lock

The initiation stage verifies that the vehicle is ready for line lock function, and confirms driver intent.

1. From the track apps menu, press **Line Lock**.

The following conditions must be met to initialize line lock:

- The vehicle is on a level surface.
- The engine is running.
- The vehicle is traveling less than 25 mph (40 km/h).
- Selectable drive mode is not in wet mode (if equipped).
- There are no electronic stability control faults.
- A spare tire is not installed.
- The parking brake is not applied.
- Auto hold is turned off.
- Adaptive cruise control is not active.
- Both doors are closed.

If you want to cancel line lock once it is initialized, press the OK button on the steering wheel. Once initiated, line lock is prepared for activation and remains initiated up to 25 mph (40 km/h). If vehicle speed exceeds 25 mph (40 km/h), line lock automatically cancels.

Engaging Line Lock

Follow the prompts in the instrument cluster display to engage line lock after it is initialized. To engage, firmly apply the brakes. Then press the OK button. Once engaged, release the brake pedal. The front brakes remain applied and the rear brakes release. At this point, the engagement timer is initiated and shown on the instrument cluster display.

The following conditions must be met to engage line lock:

- The vehicle is on a level surface.
- The engine is running.
- The vehicle is stopped.
- The parking brake is not applied.
- Both doors are closed.
- The transmission is in a forward gear.
- There are no electronic stability control faults.
- The steering wheel is in the straight ahead position.
- A spare tire is not installed.
- Auto hold is turned off.
- Adaptive cruise control is not active.

Releasing Line Lock

While line lock is engaged, you can exit (release) the feature using the OK button. When you press the OK button, line lock releases immediately and normal vehicle function resumes. When line lock engages, a countdown timer shows the remaining time before line lock is released automatically. If you exceed the time limit, or another vehicle condition requires line lock to release, the system safely disengages and normal vehicle function resumes.

Note: *If you apply the brake pedal or parking brake while line lock is engaged, line lock automatically cancels and normal brake function resumes.*