

Front Bumper Cover - GT




Removal


All vehicles

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the front wheels and tires.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. On both sides.
Remove the bolts and the body side front shield.
Torque: 19 lb.in (2.2 Nm)

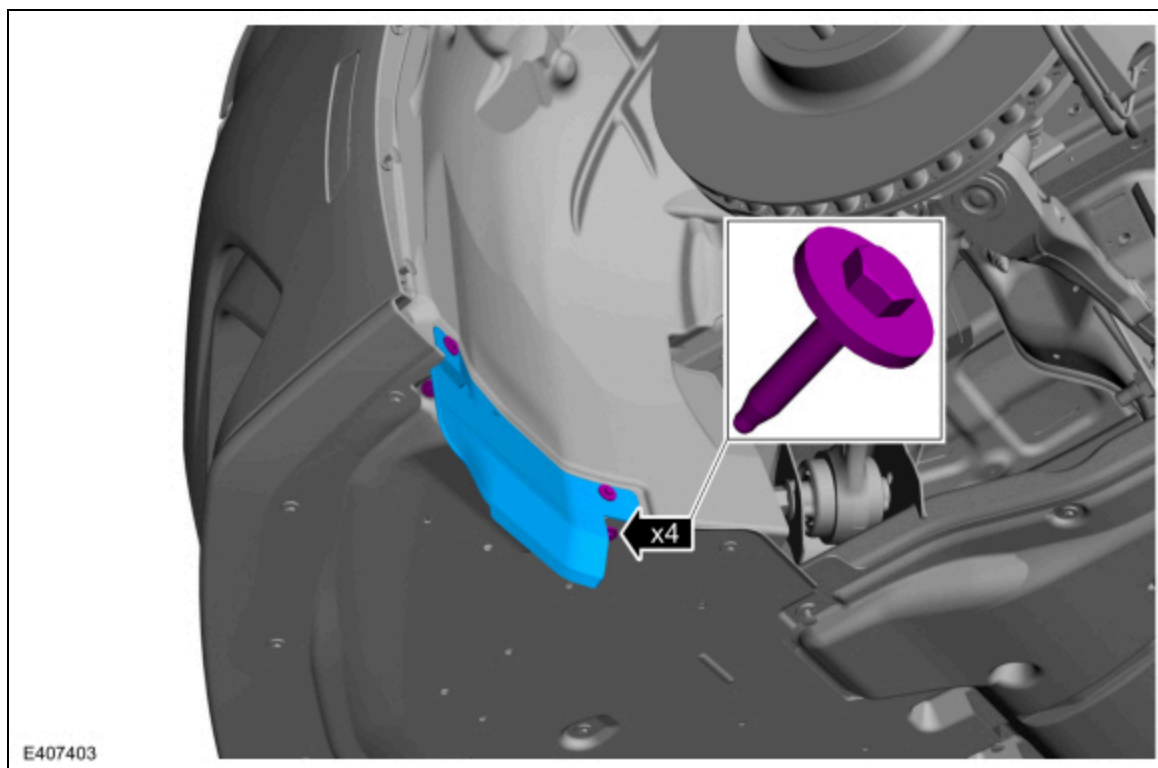


3. On both sides.
Remove the push pins and position aside the front fender splash shield.

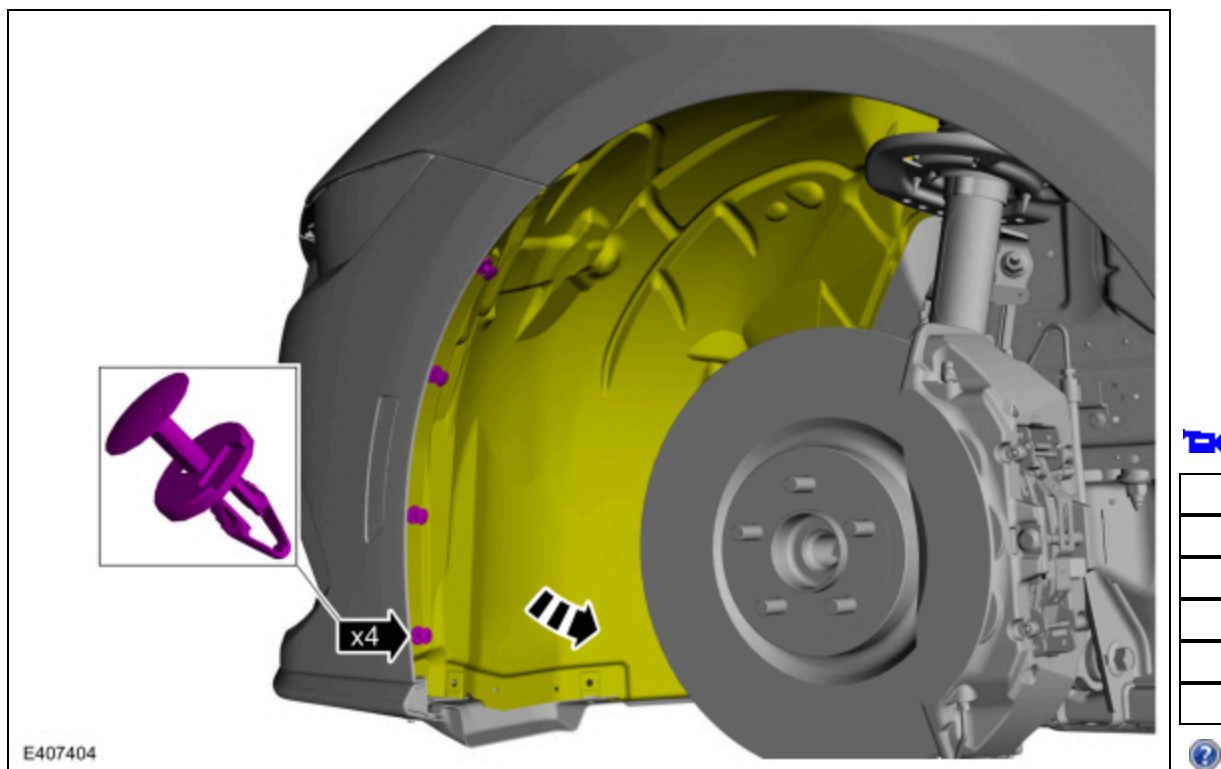


Vehicles With: GT Performance Package

4. On both sides.
Remove the screws, push pins and position aside the front fender splash shield.
Torque: 19 lb.in (2.2 Nm)

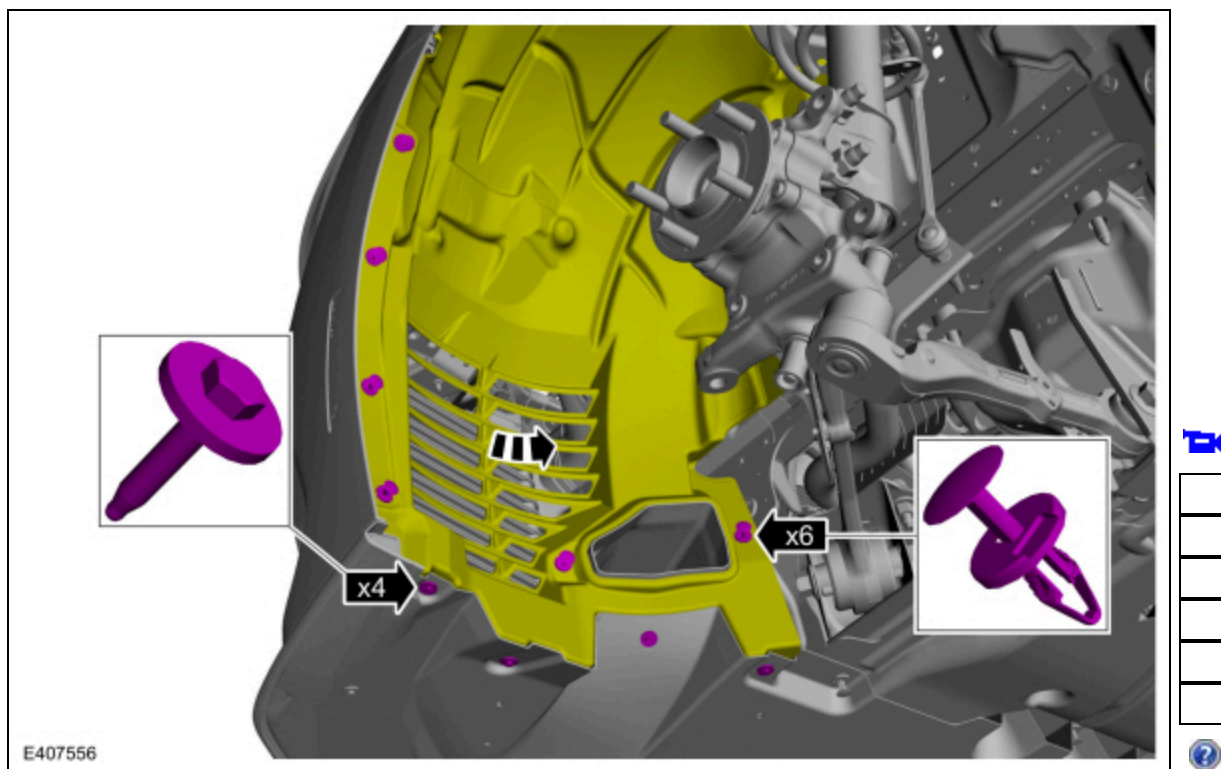


All vehicles


5. Remove the bolts.
Torque: 19 lb.in (2.2 Nm)

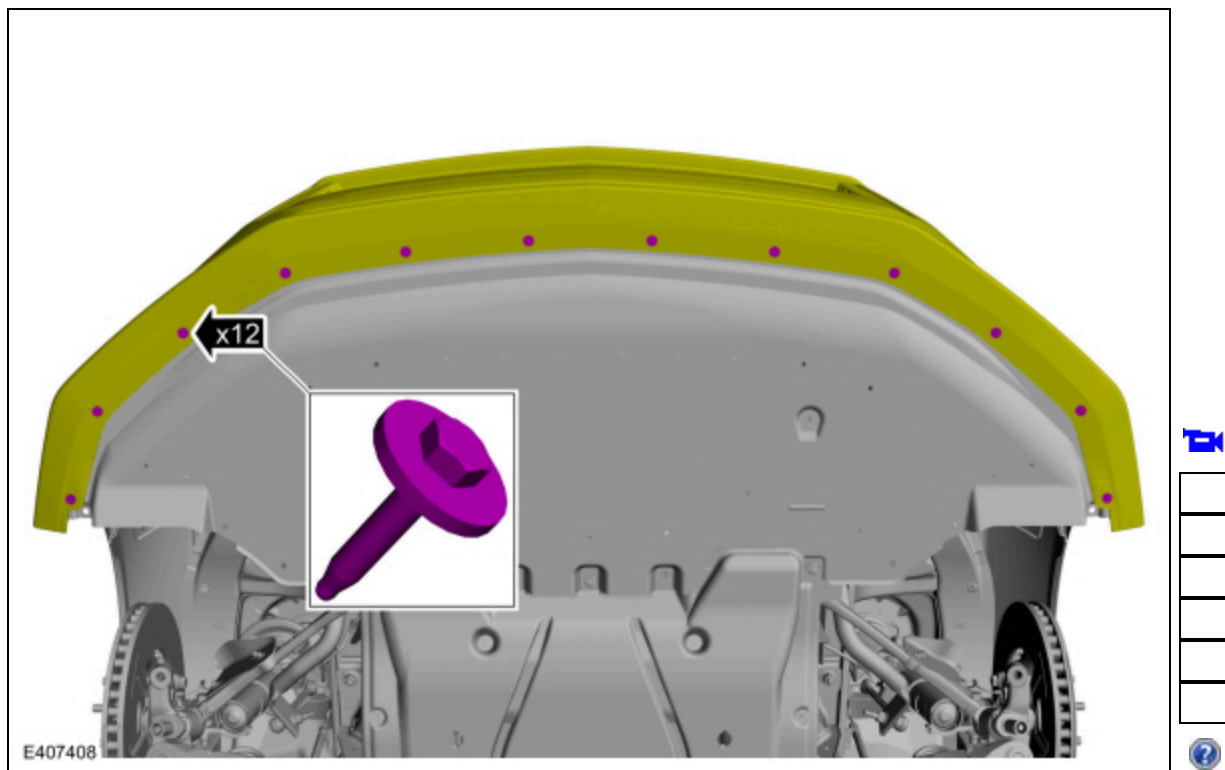


6. On both sides.
Disconnect the side repeater lamp electrical connector.

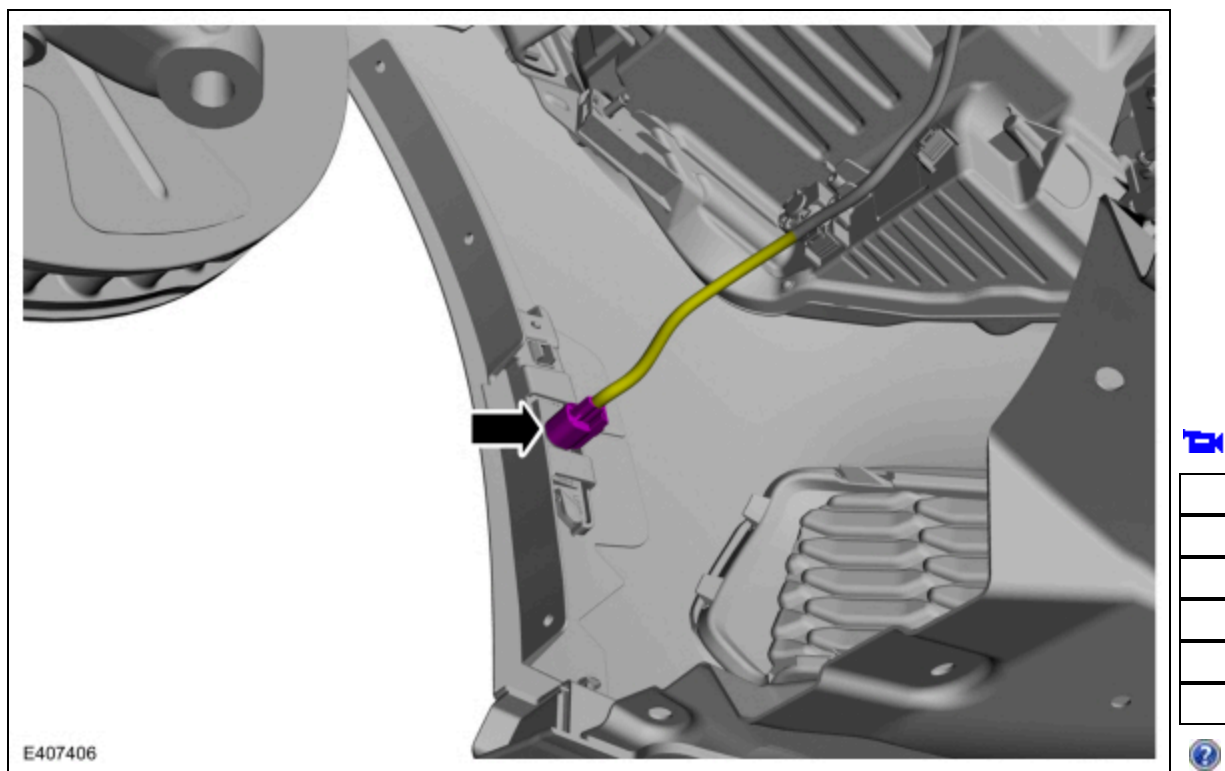



7. Disconnect the front bumper cover electrical connector.

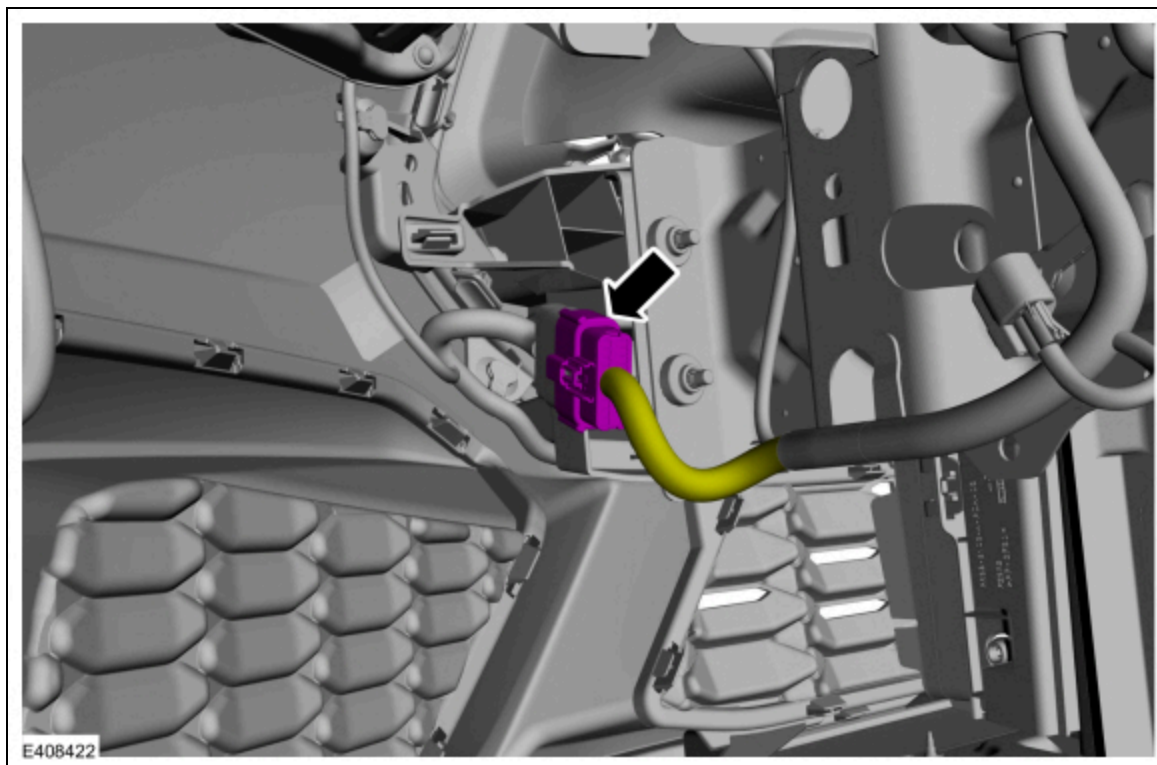

8. On both sides.
Remove the front bumper cover to fender push-pin and the bolts.
Torque: 44 lb.in (5 Nm)


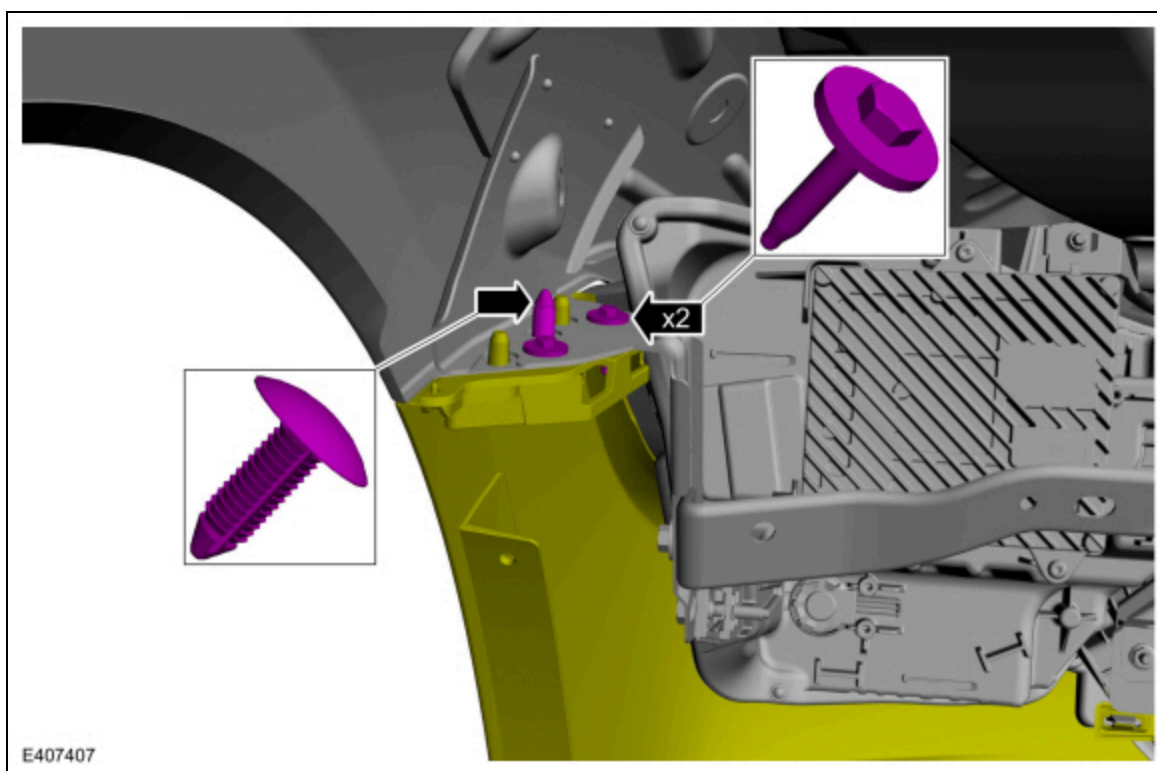


 9. Remove the push pins and the radiator sight shield.

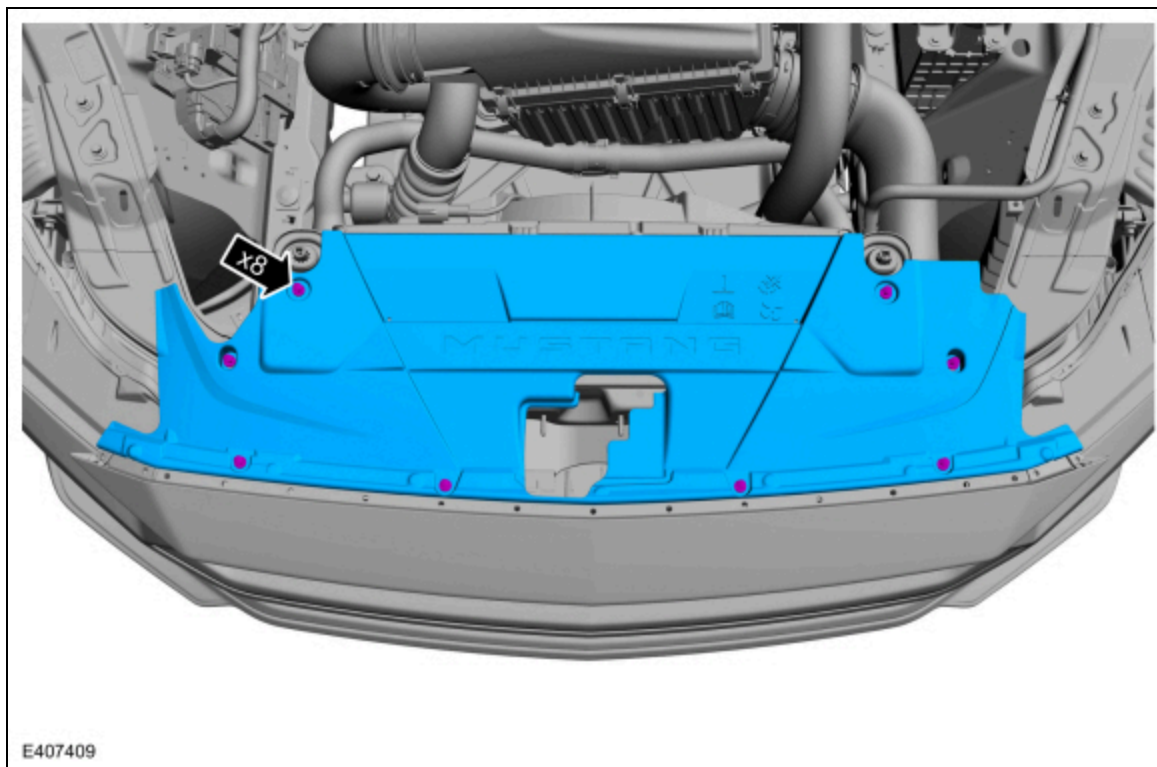

10. **NOTE:** This step requires the aid of another technician.

 Remove the bolts and the front bumper cover.
Torque: 13 lb.in (1.5 Nm)

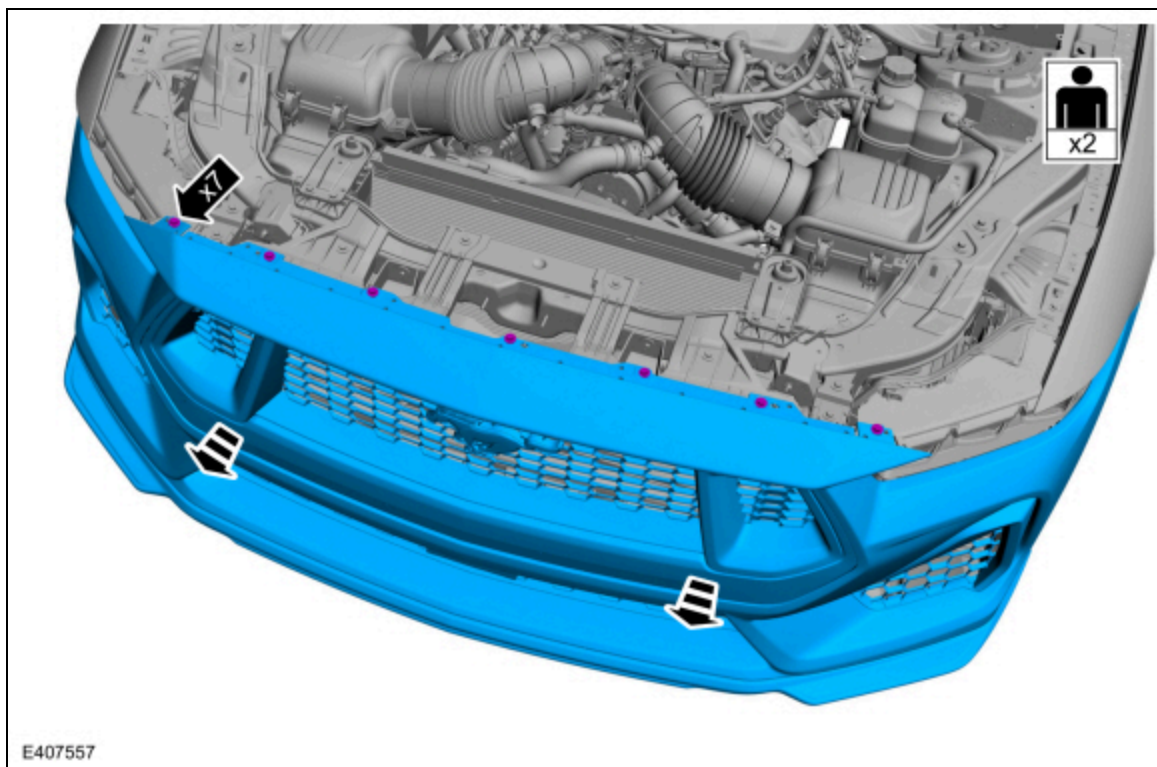

Installation

1. To install, reverse the removal procedure.

