

## Front Turn Signal Lamp




### Removal

**NOTE:** This lamp is for DRL (daytime running lamps), parking lamps and turn signal lamp.

**NOTE:** LH (left-hand) front turn signal lamp shown, RH (right-hand) front turn signal lamp similar.

1. Remove the front bumper cover.  
Refer to: [Front Bumper Cover](#) (501-19 Bumpers, Removal and Installation).  
Refer to: [Front Bumper Cover - GT](#) (501-19 Bumpers, Removal and Installation).  
Refer to: [Front Bumper Cover - Dark Horse](#) (501-19 Bumpers, Removal and Installation).
2. Remove the bolts and the front turn signal lamp.
  - Remove the screws and the front turn signal lamp.

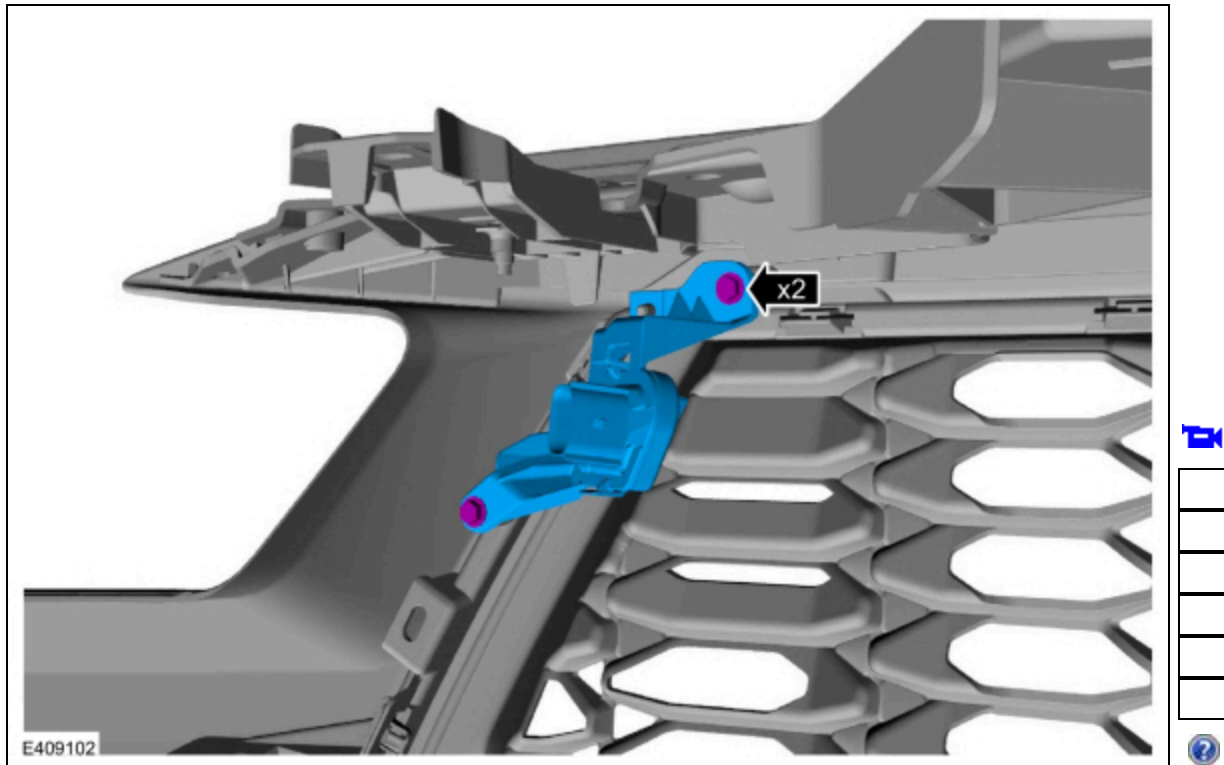

### Installation

1. To install, reverse the removal procedure.

