


FORD - MUSTANG 2024

INSTALLATION MANUAL


FRONT BUMPER WHEEL ARCH LIP MOLDING

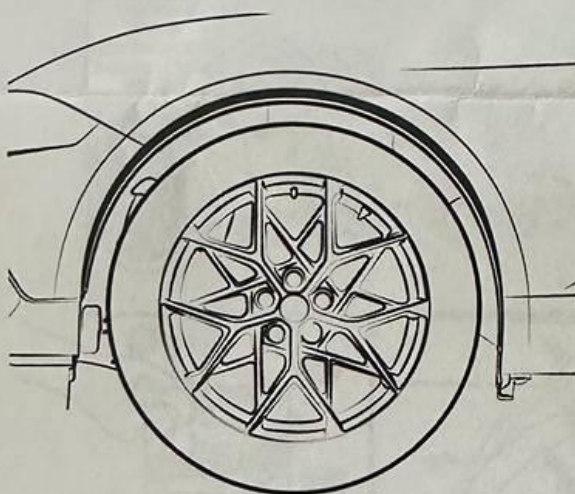


READ CAREFULLY
BEFORE INSTALLATION





WASH BEFORE
INSTALLING


WE RECOMMEND
2 PERSONS FOR
INSTALLATION

AFTER INSTALLING
DO NOT WASH CAR

24 hrs

TOOLS



CHECK LIST *Contained in kit			
ITEM	DESCRIPTION	DRAWING	AMOUNT
A	*VHB TAPE		*INCLUDED ON THE PART
B	ADHESION PROMOTER		1 PC
C	PUSHPIN		W717870-S300 8 PCS

FORD - MUSTANG 2024


INSTALLATION MANUAL




Vehicle and part must be at 16°C or 60°F or more before installation.

Keep the vehicle and parts in an environment that is within the recommended installation temperature range for 4 hours.

1 REMOVE FRONT WHEELS

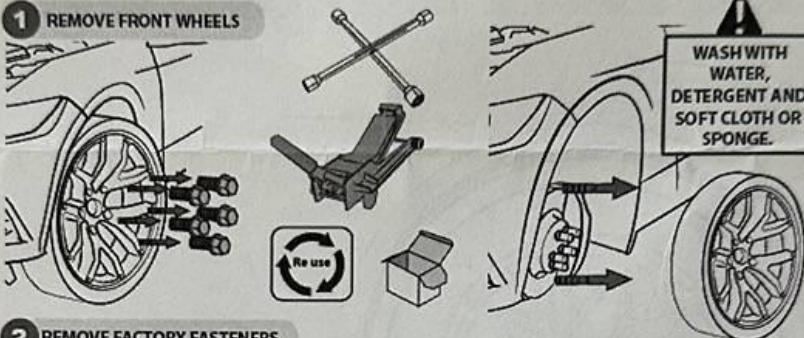


2 REMOVE FACTORY FASTENERS

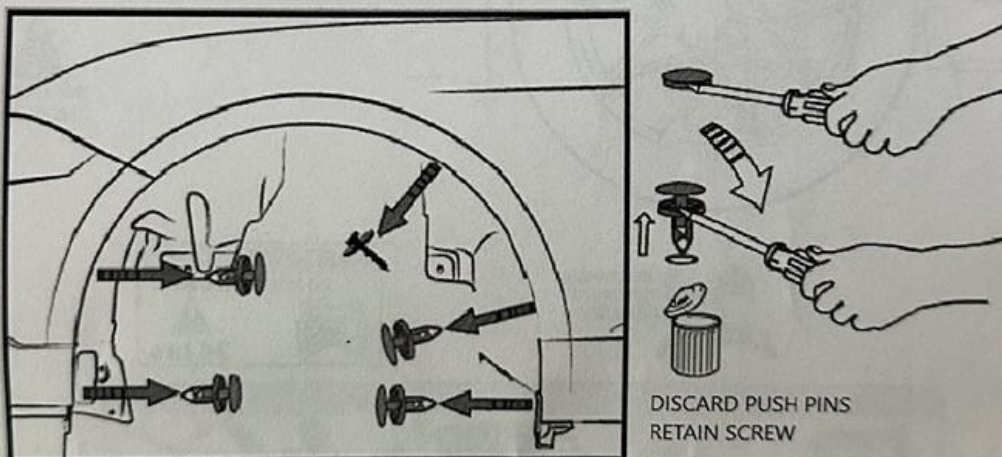


3 CLEAN

REMOVE ANY RINSE AID OR GLOSS ENHANCERS RESIDUE.

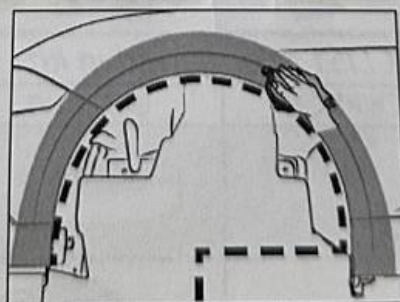


BOTTOM VIEW

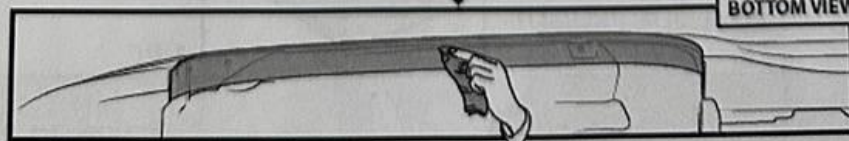



FORD - MUSTANG 2024

INSTALLATION MANUAL

4 ADHESION PROMOTER


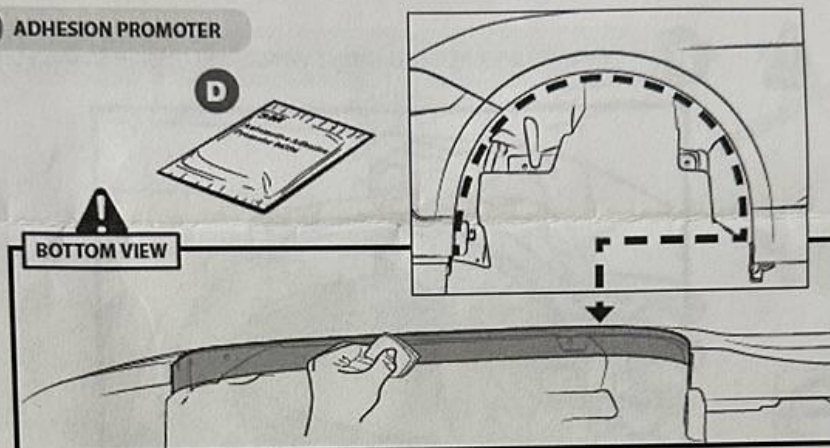


5 PEEL

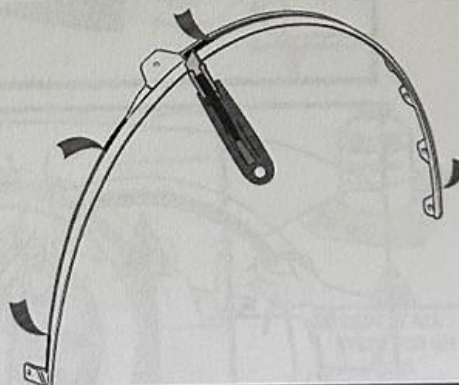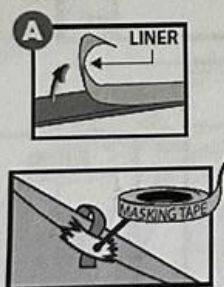


IMPORTANT -> PLACE WHEEL LIP TABS BEHIND FENDER ARCH LINER

6 PLACE THE PART

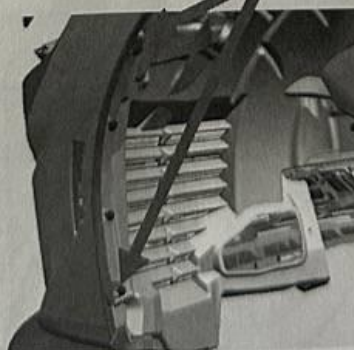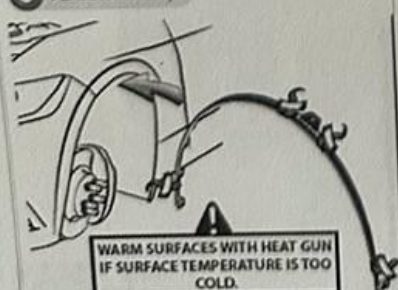

7 Install Push Pins

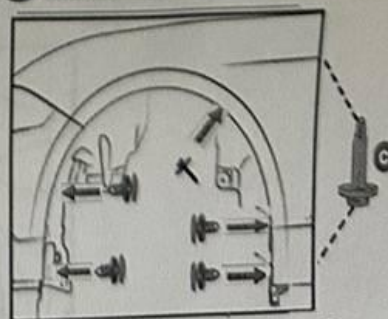

****DO NOT TIGHTEN SCREW UNTIL TAPE IS REMOVED****





FORD - MUSTANG 2024

INSTALLATION MANUAL




8

REMOVE LINER REAR TO FRONT WHILE APPLYING PRESSURE AGAINST FENDER

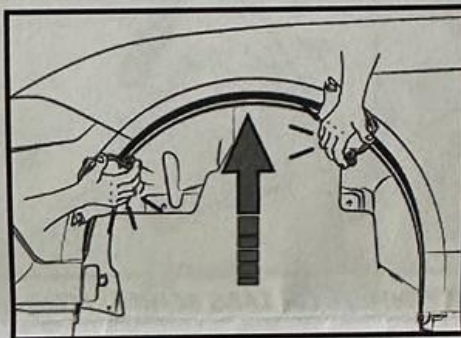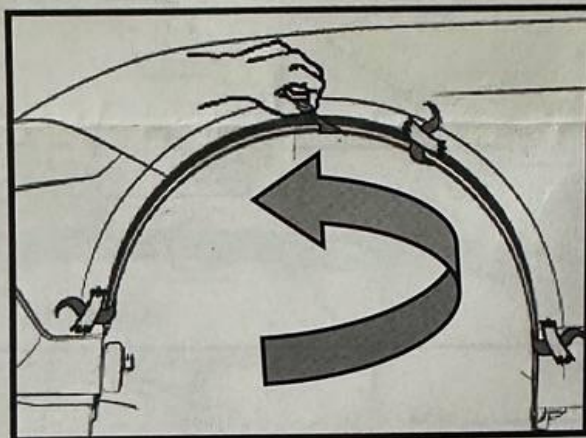

9


SCREW

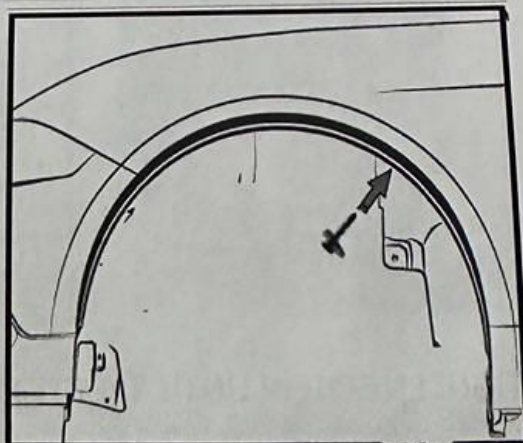


FORD - MUSTANG 2024

INSTALLATION MANUAL

10 PLACE FRONT WHEELS

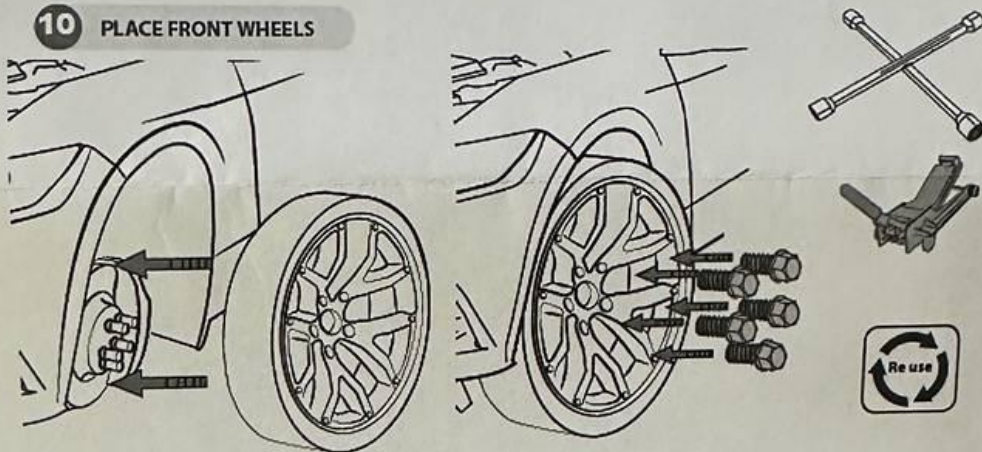

11 CLEAN

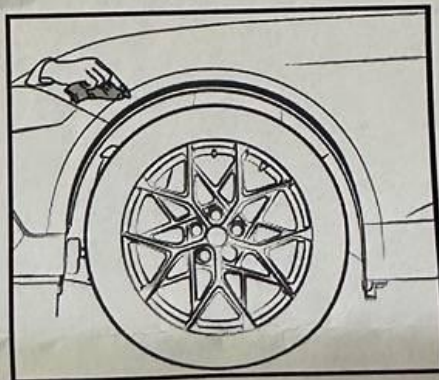

**REPEAT ALL
STEPS FOR RH
SIDE**

