



2024 Ford Mustang RTR Spoiler removal Part Number 11011.0009.12.A


NOTE – In addition to common hand tools, installation of this part requires the use of the following:

- 3M™ General Purpose Adhesive Cleaner
- Adhesive Eraser Wheel and a Hand Drill
- 3M™ VHB, double sided tape


These instructions depict an installation being preformed on a Mustang GT, Performance Pack 3. While some installation details may vary from model to model, the general procedure remains the same. Disregard any information that does not apply to your model.




1. Raise the trunk lid and remove the emergency release handle from the trunk lid liner.

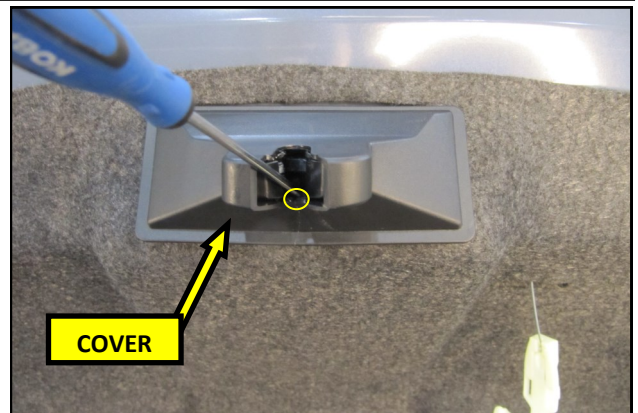


2. Remove Using a small screwdriver, pry the bottom of the truck latch cover away from the latch and remove it from the vehicle.

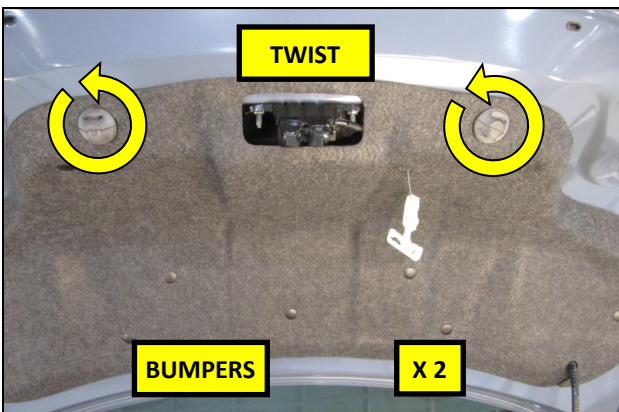


3. Remove the trunk lid bumpers and set them aside.

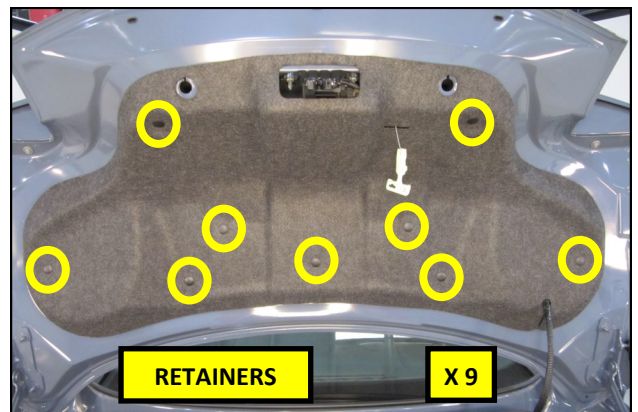


4. Using a panel trim removal tool, pry the 9 retainers from the liner.

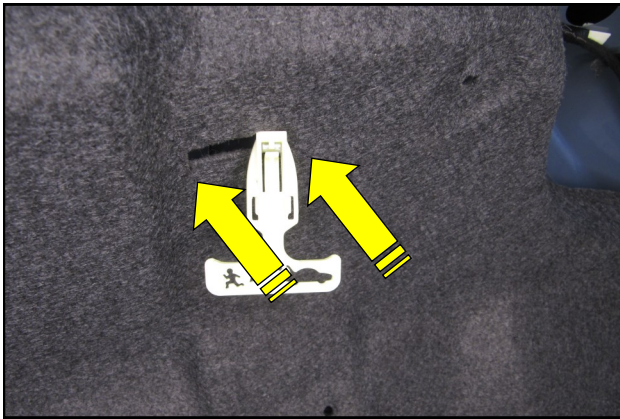


5. Push the release handle through the opening in the liner.

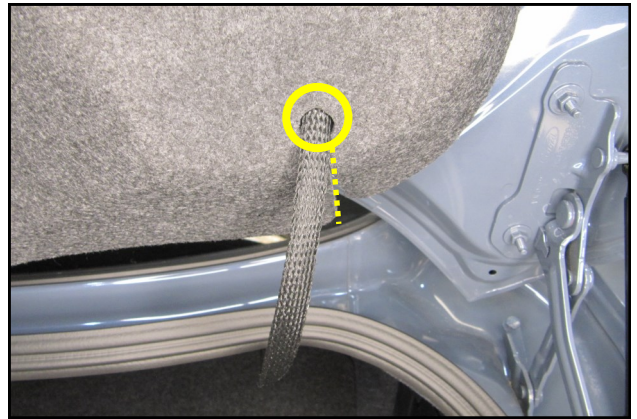


6. Pull the wiring harness out of the liner and remove the liner from the vehicle.

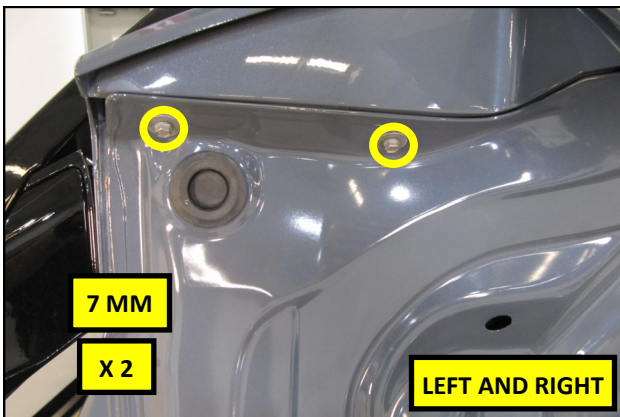


7. Using a 7 MM socket, remove the two screws on both sides of the trunk lid.

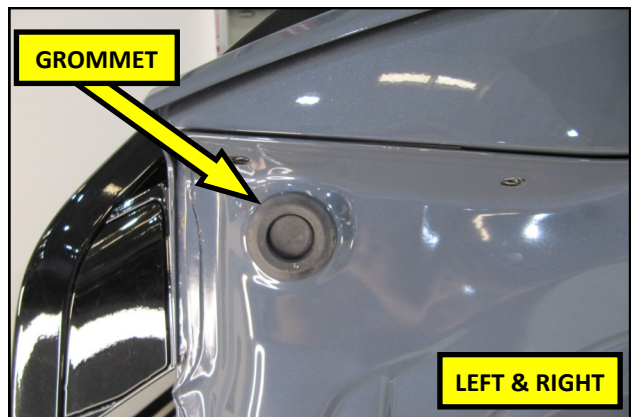

8. Pry the blind grommets out of the trunk lid and set them aside.

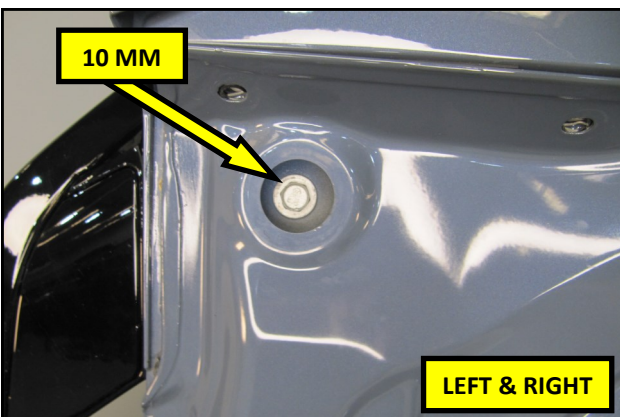

9. Using a 10 MM socket, remove the bolts from both ends of the trunk lid and lower the trunk lid.

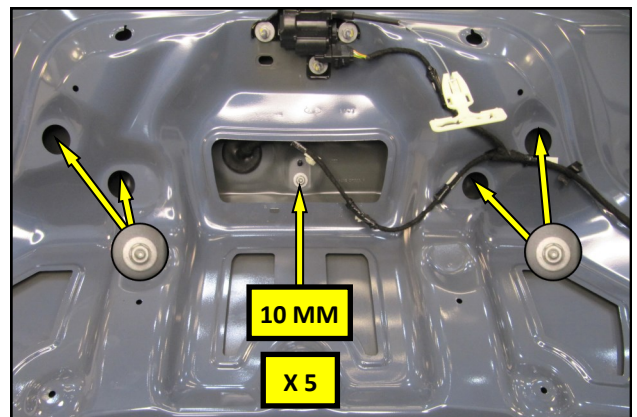


10. Using a 10 MM socket, remove the five flange nut in the trunk lid. **NOTE:** Special care should be taken to avoid dropping the nuts into the trunk lid.




NOTE: Steps 11-13 only apply to vehicles equipped with the optional performance pack spoiler.

11. Saturate the adhesive pads between the OEM spoiler and decklid with adhesive cleaner. Allow several minutes for the chemical to attack the adhesive.

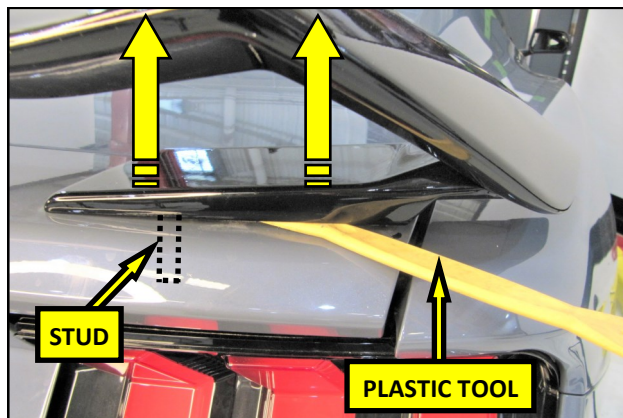

12. When the adhesive has fully softened, carefully pry the spoiler off of the decklid using plastic trim tools. **Note:** The OEM spoiler has locating studs under each section in contact with the decklid. Work the tools around these studs to separate the spoiler from the vehicle.

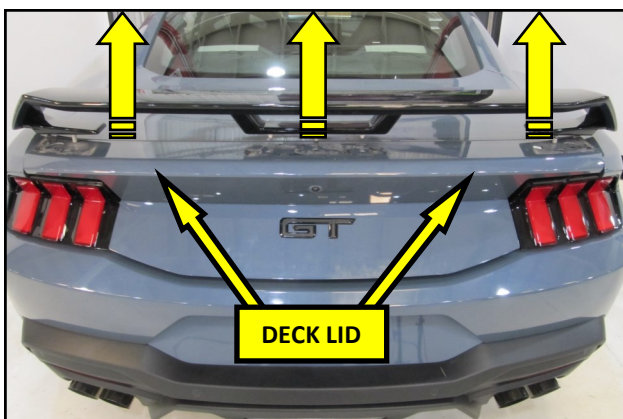

13. Remove the spoiler from the decklid and set it aside. Use a rubber eraser wheel and a drill to remove the adhesive from the deck lid.