

BODY CONTROL
MODULE (BCM)

11-5 151-1
151-5 151-9
151-14 151-31
151-34 151-48

BOO
OUTPUT

C2280A


1

CCB61


GY-OG

90-2

TURN SIGNAL/STOP/
HAZARD LAMPS

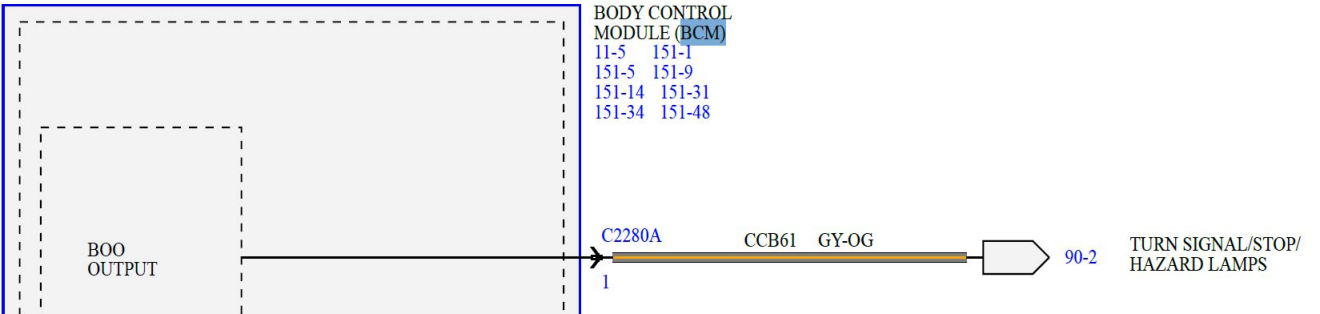

F15, F19, F20, F23, F24, F27, F28, F29

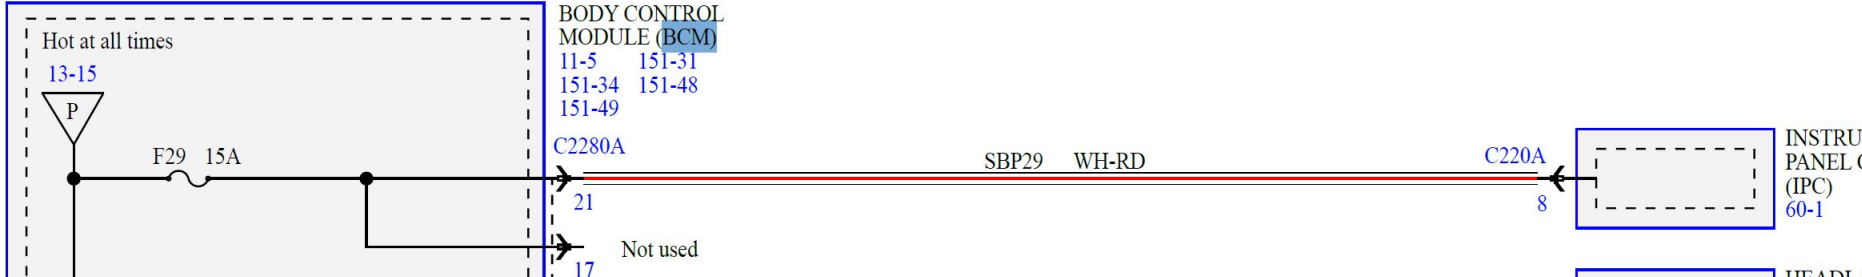

Hot at all times
13-17

RUN/START
RELAY
(Non-serviceable)

MICRO

BODY CONTROL
MODULE (BCM)

11-5 151-31
151-34 151-48
151-49

F34 30A

F21 5A

C2280A

CBP21 BU-GY

C919

LHD

CBP21 BU-GY

C9098

ELECTRONIC TO
COLLECTION (E
TRANSPONDER
130-20 132-9
146-10

F17 7.5A


Not used

6

22

2

5

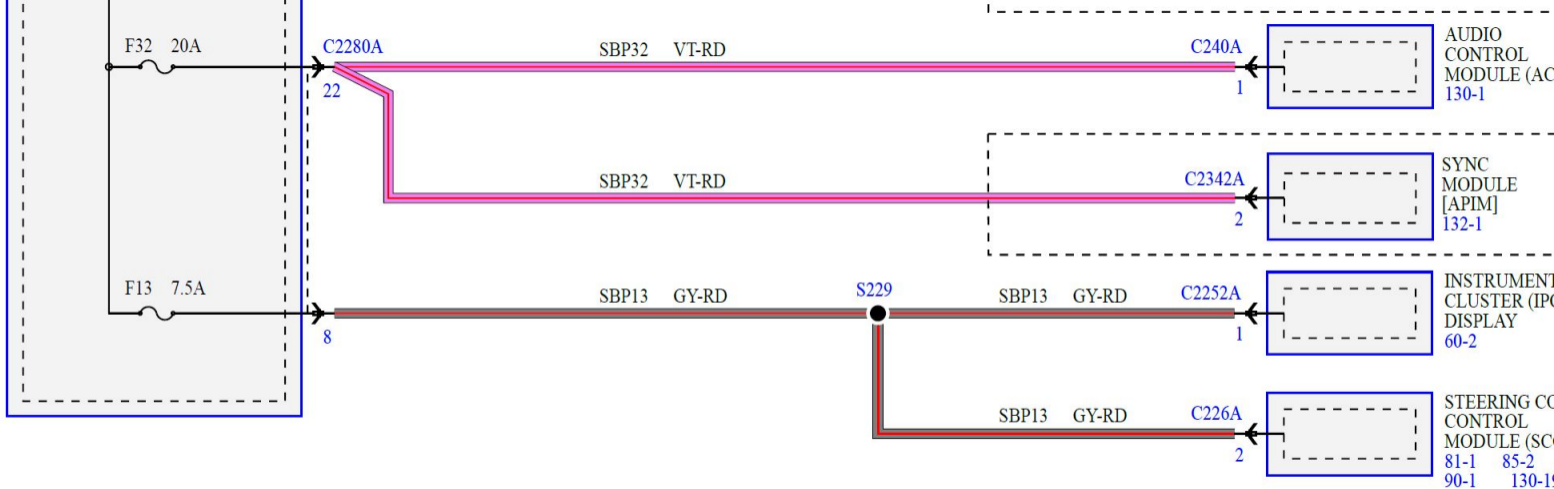

Hot at
all times

13-2



VQM BUS

F12 7.5A

C2280A

SBP12 GN-RD

C228B

HEATING, VENTILATION
AND AIR CONDITIONING
(HVAC) CONTROL
55-1 119-1

10

32

F31 10A

9

SBP31 WH-RD

C2009

AUDIO CONTROL
PANEL
56-5 60-5
130-18 132-3

20

SBP31 WH-RD

C2431A

GATEWAY
MODULE A
(GWM)
14-1

13

BODY CONTROL
MODULE (BCM)
11-5 151-31
151-34 151-48
151-49